Wireless auto torque

POWER DRIVER





MARPE



☑ Orthodontic Plate





"POWER DRIVER" MUCH EASIER! MORE CLEAR!

Easy Control



Power ON/OFF, Torque button



CW/CCW button



Operating button



RPM button

Best Specification

Torque value range	5 ~ 35 Ncm (5 Ncm step)
RPM value range	15 ~ 60 rpm (15 rpm step)
Chunk type	Push button chunk(Precise torque control)
Operating button	Top, bottom 2 pieces of button
Display	Wide backlight LCD display
Gear	Swiss Amiet gear
Motor	German Faulhaber motor
Angle	Only Contra Type

Wireless auto torque





- ✓ Stability of screw insertion in inaccessible position!
- ✓ Precise torque control, Real-time monitoring
- ✓ Battery safety and torque correction system

Preparation before use

- 1 Press 'power button' over 2 seconds turn on the device.
- 2 Pressing 'R/C(CW/CCW) button' over 2 seconds starts calibration.
- 3 LCD panel shows 'CAL' with beeping sound.
- 4 As calibration starts, motor runs and it automatically calibrates torque value.
- **5** In 3 seconds, calibration will be completed.

How to use

- 1 Press upper side of contra-angle head and connect screw driver shaft.
- 2 Press power button over 2 seconds.
- 3 Torque value setting, RPM value setting.
- 4 Checking for CW/CCW, R shows on LCD panel when CCW mode is on.
- **5** Attachment of screw.
- 6 Press operating button. (Operating mode while pressing the button, stop when the button is released)

Auto stop function

When the torque value is over the setting value Stop automatically







Palm up Grip
Use the bottom button

Disinfection and sterilization

- 1 Cleanse motor handpiece and charging socket with alcohol dampen cotton.
- Be careful not to soak main switch and adaptor.
 Use alcohol dampen cotton, if it needs to be cleaned.
- 3 Autoclaving is only possible in contra angle head. Please do not autoclave motor handpiece and recharging cradle.

A/S

Warranty period: 1 year (Battery: 6 months)

* Shaft is excluded from warranty as it is consumable.